


Instructions for use Part 1

Oticon Engage
miniRITE


Your hearing aid, speaker, and earpiece

miniRITE

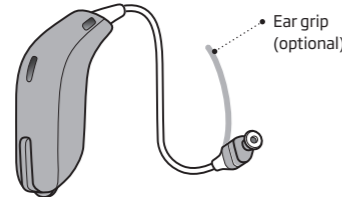


The hearing aids uses one of the following speakers:

Standard speakers

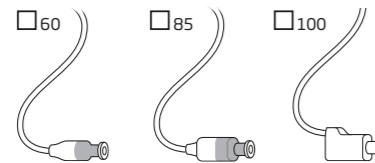


Power flex mould speakers

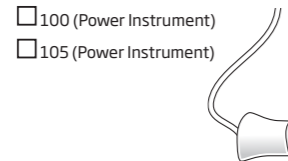

miniRITE

What it is and does

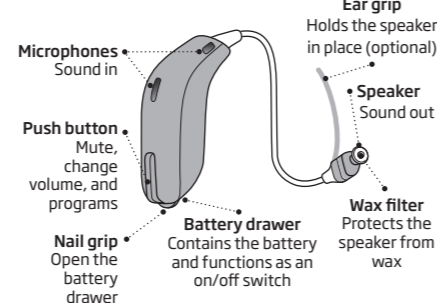


The standard speakers use one of the following earpieces:

Standard earpieces:

- Open dome
- Bass dome, single vent
- Bass dome, double vent
- Power dome
- Grip Tip
Available in small and large, left and right, with or without vent.

 Dome sizes




* only as open dome for speaker 60
** not for open dome

Turn the hearing aid on and off

The battery drawer is used to switch the hearing aid on and off. To save battery life, make sure your hearing aid is switched off when you are not wearing it. If you wish to return to the standard settings of the hearing aid, simply open and close the battery drawer (quick reset).

Turn ON

Close the battery drawer with the battery in place.

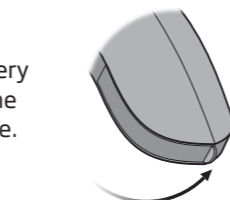

Turn OFF

Open the battery drawer.



When to replace the battery

When it is time to replace the battery, you will hear three beeps repeated in moderate intervals until the battery runs out.


Three beeps*
= The battery is running low

Four descending tones
= The battery has run out

Identify left and right hearing aid

It is important to distinguish between the left and the right hearing aid, as they may be programmed differently.

You can find left/right colour indicators in the battery drawer and on 60 and 85 speakers as shown. Indicators (either L or R) can also be found on 100 speakers and some earpieces.

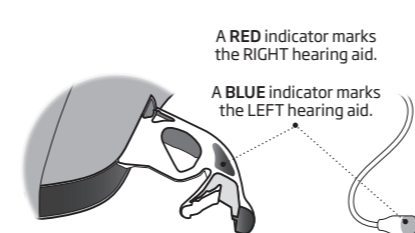

Battery tip

To make sure the hearing aid is always working, bring spare batteries with you, or replace the battery before you leave home.


Optional LED

Red blinks, continuously repeated, to indicate battery low.

* Bluetooth® will be turned off and it will not be possible to use wireless accessories.
Note: Batteries need to be replaced more often if you are streaming to your hearing aid.

How to replace the battery (size 312)

1. Remove
Fully open the battery drawer. Remove the battery.

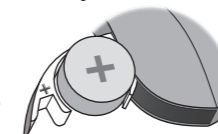


2. Uncover
Remove the sticky label from the + side of the new battery.




Tip:

Wait 2 minutes so that the battery can draw air, to ensure optimal functioning.

3. Insert
Insert the new battery into the battery drawer. Make sure the + side is facing up.

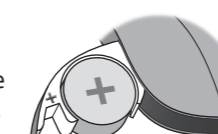

4. Close
Close the battery drawer. The hearing aid will play a jingle through the earpiece. Hold the earpiece close to your ear to hear the jingle.

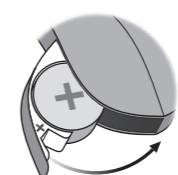

Put on the hearing aid


Step 1

Place the hearing aid behind your ear. The speaker should always be used with an earpiece attached. Use only parts designed for your hearing aid.




Step 2.

Hold the bend of the speaker wire between your thumb and index finger. The earpiece should point towards opening of the ear canal.

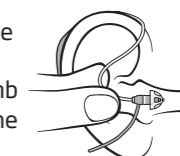

Step 3.


Gently push the earpiece into your ear canal until the speaker wire sits close to your head. If the speaker has an ear grip, place it in the ear so it follows the contour of the ear.

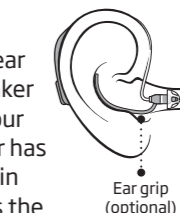

Flight mode

When flight mode is activated, Bluetooth® is turned off. The hearing aid will still be working. Pressing the push button on one hearing aid will activate flight mode on both hearing aids.

miniRITE

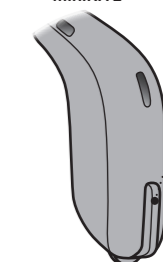

To activate and deactivate
Press the push button for at least 7 seconds. A jingle confirms your action.

 
Opening and closing the battery drawer will also deactivate flight mode.

Change program

Your hearing aid can have up to 4 different programs. These are programmed by your hearing care professional.

Press the button to change program

Note that if you have two hearing aids, the RIGHT hearing aid switches forwards, e.g. from program 1 to 2, and the LEFT hearing aid switches backwards, e.g. from program 4 to 3.




Change program Short press Long press

To be filled out by the hearing care professional


Program	Activation sound	When to use
1	"1 beep"	
2	"2 beeps"	
3	"3 beeps"	
4	"4 beeps"	

Change volume

The push button allows you to adjust the volume. You will hear a click when you turn the volume up or down.

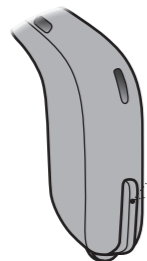


- A short press on the RIGHT hearing aid increases the volume.
- A short press on the LEFT hearing aid decreases the volume

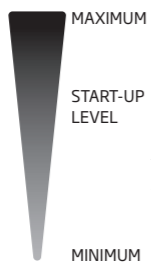

You will hear 2 beeps at start-up level.

Mute

Use the mute function if you need to silence the hearing aid. The mute function only mutes the microphone(s) on the hearing aid.

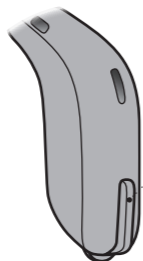

Apply a long press (4 seconds) to the button to mute the hearing aid. To reactivate, push the button briefly.

Other options



Autophone

is a program that will automatically be activated when your telephone has a built in teleloop (see above). A magnet needs to be placed at your telephone next to the sound outlet.

Your individual hearing aid settings

To be filled out by your hearing care professional.

Tinnitus SoundSupport: Limitation on use			
<input type="checkbox"/>	No limitation on use		
	Program	Start-up volume	Max volume
<input type="checkbox"/>	1	Max _____ hours per day	Max _____ hours per day
<input type="checkbox"/>	2	Max _____ hours per day	Max _____ hours per day
<input type="checkbox"/>	3	Max _____ hours per day	Max _____ hours per day
<input type="checkbox"/>	4	Max _____ hours per day	Max _____ hours per day

Settings overview for your hearing aid					
Left			Right		
<input type="checkbox"/> Yes	<input type="checkbox"/> No	Volume control	<input type="checkbox"/> Yes	<input type="checkbox"/> No	
<input type="checkbox"/> Yes	<input type="checkbox"/> No	Program shift	<input type="checkbox"/> Yes	<input type="checkbox"/> No	
<input type="checkbox"/> Yes	<input type="checkbox"/> No	Mute	<input type="checkbox"/> Yes	<input type="checkbox"/> No	
Volume control indicators					
<input type="checkbox"/> On	<input type="checkbox"/> Off	Beeps at min / max volume	<input type="checkbox"/> On	<input type="checkbox"/> Off	
<input type="checkbox"/> On	<input type="checkbox"/> Off	Clicks when changing volume	<input type="checkbox"/> On	<input type="checkbox"/> Off	
<input type="checkbox"/> On	<input type="checkbox"/> Off	Beeps at preferred volume	<input type="checkbox"/> On	<input type="checkbox"/> Off	
Battery indicators					
<input type="checkbox"/> On	<input type="checkbox"/> Off	Low battery warning	<input type="checkbox"/> On	<input type="checkbox"/> Off	

IMPORTANT NOTICE

Do not use the mute function as an off switch, as the hearing aid still draws current from the battery in this mode.