


Instructions for use Part 1

Oticon Engage
BTE PP / BTE


Your hearing aid and earpiece

There are two different attachments and several different earpieces available for the hearing aid.

With sound hook and mould earpiece

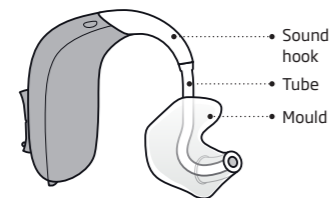


With thin tube (Corda miniFit)

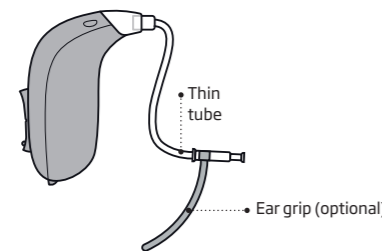


With sound hook and mould

What it is and does

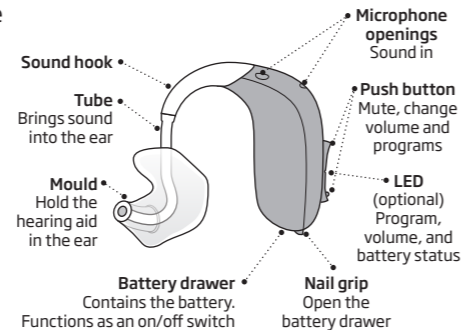

With thin tube

What it is and does

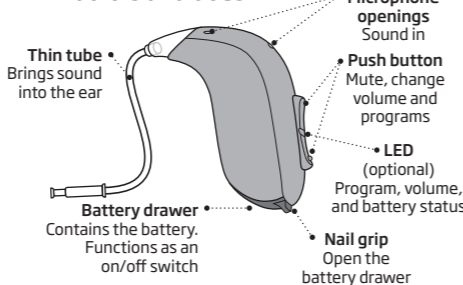


Turn the hearing aid on and off

The battery drawer is also used to switch the hearing aid on and off. To save battery life, make sure your hearing aid is switched off when you are not wearing it. If you wish to return to the standard settings of the hearing aid, simply open and close the battery drawer (quick reset).

Optional LED

Two long green blinks indicate that the hearing aid is turned on.

Turn ON
Close the battery drawer with the battery in place.

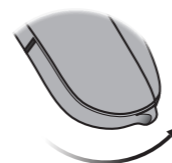


Turn OFF
Open the battery drawer.



Identify left and right hearing aid

It is important to distinguish between the left and the right hearing aid as they may be programmed differently.

You can find left/right colour indicators in the battery drawer. Indicators can also be found on Micro moulds (optional)

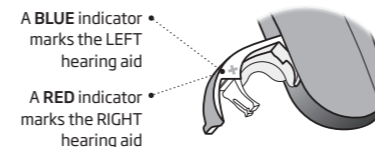

When to replace the battery

When it is time to replace the battery, you will hear three beeps repeated in moderate intervals until the battery runs out.

🎵🎵🎵 **Three beeps***
= The battery is running low

🎵🎵🎵🎵 **Four descending tones**
= The battery has run out

Battery tip

To make sure the hearing aid is always working, bring spare batteries with you, or replace the battery before you leave home.


Optional LED

Red blinks, continuously repeated, to indicate battery low.

* Bluetooth® will be turned off and it will not be possible to use wireless accessories.
Note: Batteries need to be replaced more often if you are streaming to your hearing aid.

How to replace the battery (size 13)

1. Remove
Fully open the battery drawer. Remove the battery.

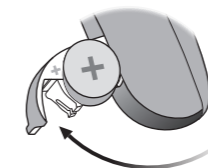


2. Uncover
Remove the sticky label from the + side of the new battery.



Tip:
Wait 2 minutes so that the battery can draw air, to ensure optimal functioning.

3. Insert
Insert the new battery into the battery drawer. Insert it from above, NOT from the side. Make sure the + side is facing up.

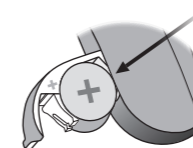


4. Close
Close the battery drawer. The hearing aid will play a jingle through the earpiece. Hold the earpiece close to your ear to hear the jingle.



Put on the hearing aid with mould

Read the following pages if you have a hearing aid with a sound hook and mould.

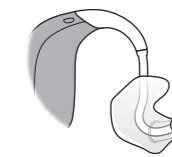

The mould is customised for you and fits your ear shape. The moulds are unique for the left or the right ear.

Step 1
Gently pull your ear outwards and press the mould in the direction of the ear canal, twisting slightly.



Step 2.
Place the hearing aid behind your ear.




Put on hearing aid with thin tube

Step 1
Place the hearing aid behind your ear.



The thin tube should only be used with an attached earpiece. Use only parts designed for your hearing aid.

Step 2
Hold the bend of the tube between your thumb and index finger. The earpiece should point towards the ear canal opening.

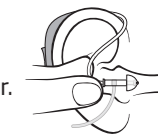

Step 3
Gently push the earpiece into your ear canal until the thin tube sits close to your head. If the thin tube has an ear grip, place it in the ear so it follows the contour of the ear.



 
The thin tube uses one of the following earpieces:

Standard earpieces:

- Open dome
- Bass dome, single vent
- Bass dome, double vent
- Power dome
- Grip Tip

Available in small and large, left and right, with or without vent.

Dome sizes




Flight mode

When flight mode is activated, Bluetooth® is turned off. The hearing aid will still be working. Pressing the push button on one hearing aid will activate flight mode on both hearing aids.

Optional LED

 The LED will blink green, red, red a few times. This confirms that flight mode is activated.



To activate and deactivate
Press the push button for at least 7 seconds. A jingle confirms your action.


Opening and closing the battery drawer will also deactivate flight mode.

Change program

Your hearing aid can have up to 4 different programs. These are programmed by your hearing care professional.

Optional LED

The number of green blinks indicate the selected program.

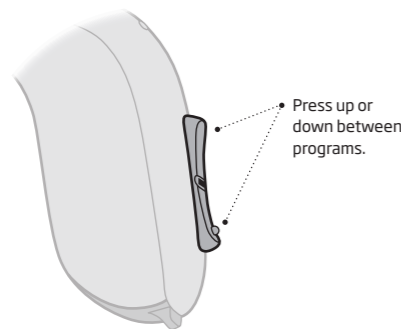

Note that you can change continuously between programs - both up and down in the program order. For example, if you want to go from program 1 to 4, you can press the down button once instead of pressing the up button 3 times.


To be filled out by the hearing care professional

Program	Activation sound	When to use
1	"1 beep"	
2	"2 beeps"	
3	"3 beeps"	
4	"4 beeps"	

Program change:	<input type="checkbox"/> LEFT	<input type="checkbox"/> RIGHT	<input type="checkbox"/> Short press	<input type="checkbox"/> Long press
------------------------	-------------------------------	--------------------------------	--------------------------------------	-------------------------------------

Change volume

The push button allows you to adjust the volume. You will hear a click when you turn the volume up or down.

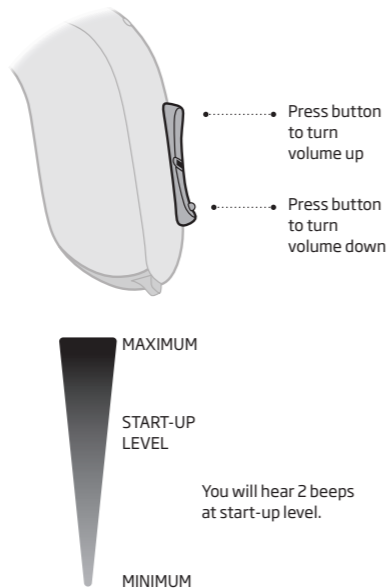


You will hear 2 beeps at start-up level.

Mute

Use the mute function if you need to silence the hearing aid. The mute function only mutes the microphone(s) on the hearing aid.

Optional LED

Green and red blinks, continuously repeated, to indicate mute.

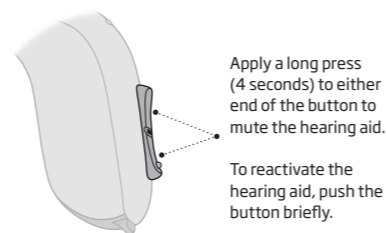

To reactivate the hearing aid, push the button briefly.

IMPORTANT NOTICE

Do not use the mute function as an off switch, as the hearing aid still draws current from the battery in this mode.

Other options



Telecoil

helps you hear better when using a telephone with a built in loop or when you are in buildings with teleloop systems such as theatres, churches or lecture rooms. This symbol or a similar sign is shown wherever a teleloop has been installed.



Autophone

is a program that will automatically be activated when your telephone has a built in teleloop (see above). A magnet needs to be placed at your telephone next to the sound outlet.

Tamper-resistant battery drawer


To keep the battery out of reach of infants, small children, and people with learning difficulties, a tamper-resistant battery drawer should be used.

To lock the battery drawer




Close the battery door completely and make sure it is locked.

Tool to unlock the battery drawer

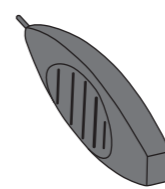

Use this small tool provided by your hearing care professional.

Unlock the battery drawer

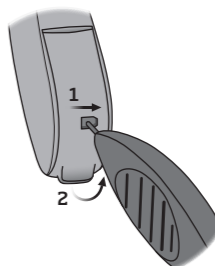

Insert the tip of the tool into the small hole at the back of the battery drawer.

1. Move it to the right and hold it
2. Open the battery drawer

IMPORTANT NOTICE

Avoid excessive force when opening the battery drawer in the locked position. Do not force the battery drawer beyond its fully opened position. Make sure to insert the battery correctly.

Please contact your hearing care professional if you suspect the tamper-resistant effectiveness or locking ability is damaged.

Sound and LED indications

Different sound and LED light indications help to show the hearing aid status. The different setting options are listed on the following pages. Your hearing care professional can set sound and LED indications to match your preferences.

Your individual hearing aid settings

To be filled out by your hearing care professional.

Tinnitus SoundSupport: Limitation on use			
<input type="checkbox"/>	No limitation on use		
	Program	Start-up volume	Max volume
<input type="checkbox"/>	1	Max _____ hours per day	Max _____ hours per day
<input type="checkbox"/>	2	Max _____ hours per day	Max _____ hours per day
<input type="checkbox"/>	3	Max _____ hours per day	Max _____ hours per day
<input type="checkbox"/>	4	Max _____ hours per day	Max _____ hours per day

Settings overview for your hearing aid			
Left		Right	
<input type="checkbox"/> Yes	<input type="checkbox"/> No	Volume control	<input type="checkbox"/> Yes <input type="checkbox"/> No
<input type="checkbox"/> Yes	<input type="checkbox"/> No	Program shift	<input type="checkbox"/> Yes <input type="checkbox"/> No
<input type="checkbox"/> Yes	<input type="checkbox"/> No	Mute	<input type="checkbox"/> Yes <input type="checkbox"/> No
Volume control indicators			
<input type="checkbox"/> On	<input type="checkbox"/> Off	Beeps at min / max volume	<input type="checkbox"/> On <input type="checkbox"/> Off
<input type="checkbox"/> On	<input type="checkbox"/> Off	Clicks when changing volume	<input type="checkbox"/> On <input type="checkbox"/> Off
<input type="checkbox"/> On	<input type="checkbox"/> Off	Beeps at preferred volume	<input type="checkbox"/> On <input type="checkbox"/> Off
Battery indicators			
<input type="checkbox"/> On	<input type="checkbox"/> Off	Low battery warning	<input type="checkbox"/> On <input type="checkbox"/> Off